



Interfaces

Digital Inputs	1 positive trigger input for ignition detection 1 negative trigger input for normal use
Power Button	Power on and power off, can be disabled via air interface protocol
Function Button with Vibration Feedback	Emergency alert or instant geo-fence setting
Cellular Antenna	Internal only
GNSS Antenna	Internal only
LED Indicators	CEL, GNSS, PWR
USB Type-C Interface	Used for external power and configuration

Air Interface Protocol

Transmit Protocol	TCP, UDP, SMS
Scheduled Report	Report position and status based on preset time intervals, distance, mileage or a combination of these settings
Geo-fences	Support up to 20 geo-fence regions
Low Power Alarm	Alarm when battery is low
Power On/Off Report	Report when the device is powered on and off
SOS/Emergency Alarm	SOS alarm via pressing function button
Special Alarm	Special alarm based on digital inputs
Motion Detection	Motion alarm based on internal 3-axis accelerometer